

R4348B

INDUSTRIAL FLAME SWITCH

PRODUCT HAND BOOK



APPLICATION

The R4348B flame switch is for application in large commercial and industrial burner installations.

The function is:

flame safeguard primary controls capable of providing system „safe start“ check and flame sensing functions.

The unit can also be used in installations using an EC7800 microcomputer-based burner control system - to extend the number of burners being controlled.

The unit includes a 3-pole flame relay which is energized when flame is sensed and de-energized when „no-flame“ is sensed and a 3-pole line voltage „load relay“.

- Standard is a green LED which is illuminated when the flame relay is energized.
- R4348B1057 only:
 - LED bar and 4-20mA output for indicating and / or recording the flame current strength.
- Unpowered relay outputs enable Honeywell sensors and amplifiers to be used with a wide range of logic schemes according to customer needs.
- Plug-in unit makes wiring and servicing easy.
- Plug-in flame signal amplifiers available to match a wide range of flame sensors.

SPECIFICATIONS



WARNING

To avoid the risk of electrical shock which could cause personal injury, follow all safety notices in this documentation.

MODEL:

R4348B industrial flame switch with 3-pole flame relay and 3-pole load relay

MODEL NUMBERS	NOTES ¹⁾
R4348B1008	standard model
R4348B1057	with 4-20mA output and LED-meter

¹⁾ see OPTIONS also

ELECTRICAL RATINGS:

can operate on 110V - 120V - 127V - 230V 50/60Hz

POWER CONSUMPTION:

less than 15VA

ENCLOSURE:

IP40 or IP54 depending on the model and base

AMBIENT TEMPERATURE LIMITS:

Operating: - 20°C to + 60°C.

Storage: - 40°C to + 80°

CLASSIFICATION:

OOCRXB

APPROVALS:

Installation and cabling for both intermittent and continuous operations must be in accordance with relevant standards (i.e. EN298)

OPTIONS: (see MODELS also)

LED-METER. A series of color coded LED's on the face of the unit which give a direct indication of flame current strength.

Green LED's indicate normal flame current strength. Yellow LED's indicate marginal signals. Red LED's indicate unsatisfactory flame signal strength (see fig. 2).

4-20mA OUTPUT. The flame current value can be registered and/or displayed at a local or remote location.

Load : 0 to 750Ω.

Load	Typical power factor	Maximum current rating (continuous operation)		Maximum In-rush current
		230V	110V 120V 127V	
Solenoid valve	0.4	1.5A	2A	10 x rated current
Motorized valve	0.5	2A	4A	3 x rated current
Burner motor	0.6	3A	3A	5 x rated current
Ignition transformer	0.2	2.5A	4A	rated current
Other	0.95	4A	4A	rated current

CONTACT RATINGS:

If more than one safety shut-off valve is to be actuated by the R4348 it is recommended to use separate relay contacts rather than paralleling from one contact.

MAXIMUM RELATIVE HUMIDITY:

90 % RH at 40°C (not to exceed saturation point)

WEIGHT : 1,5 Kg

FLAME SENSORS AND AMPLIFIERS :

will accept any of the plug-in amplifiers and appropriate sensor listed .

FLAME INDICATION :

Green LED on face of unit when illuminated indicates presence of flame. Relay contact enables remote indication of flame presence to be made.

MOUNTING :

Can be wall, DIN rail or panel mounted.

Subbase: 46176612-501

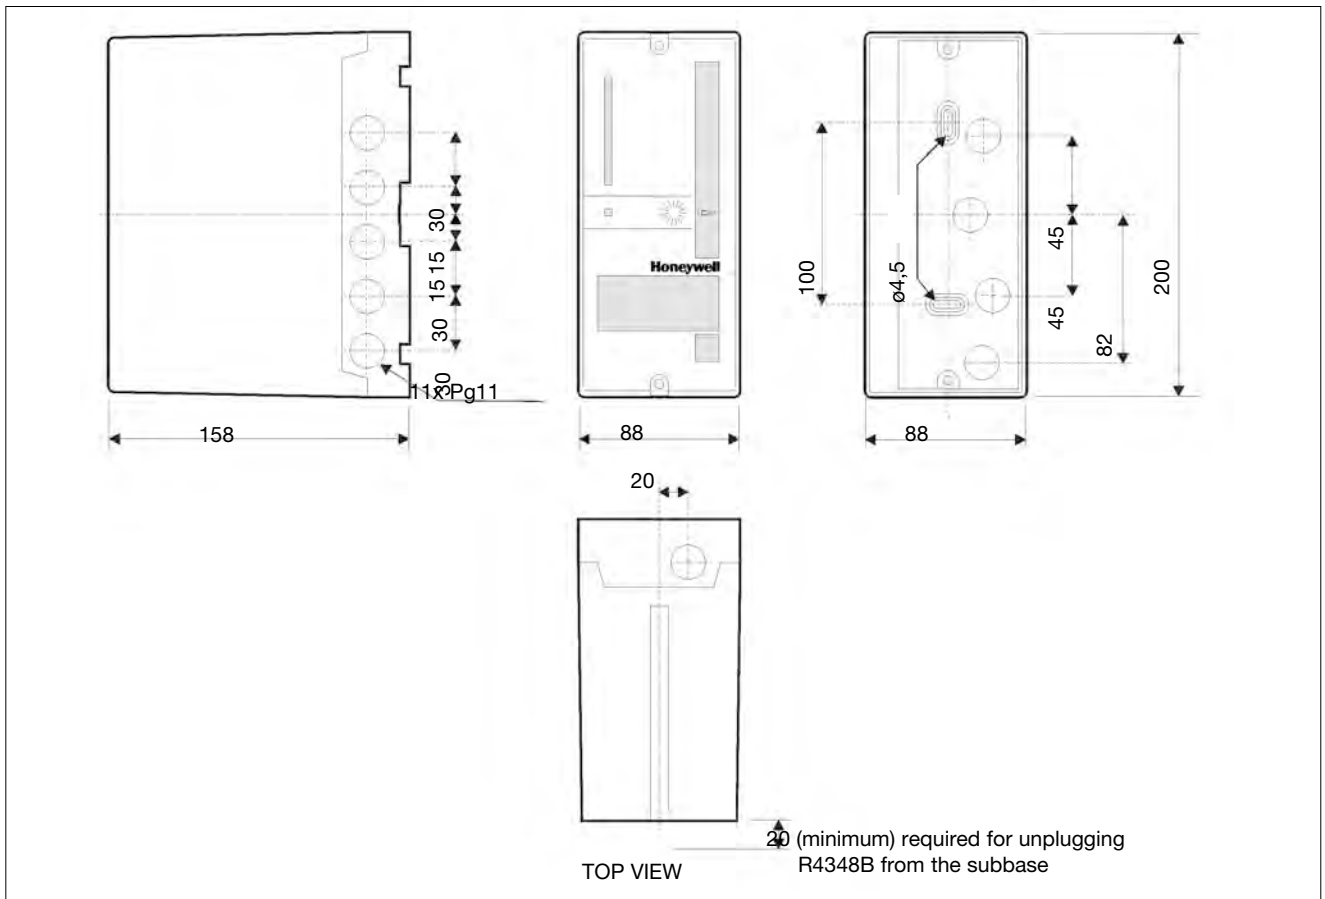


FIG. 1 Dimensions in mm.

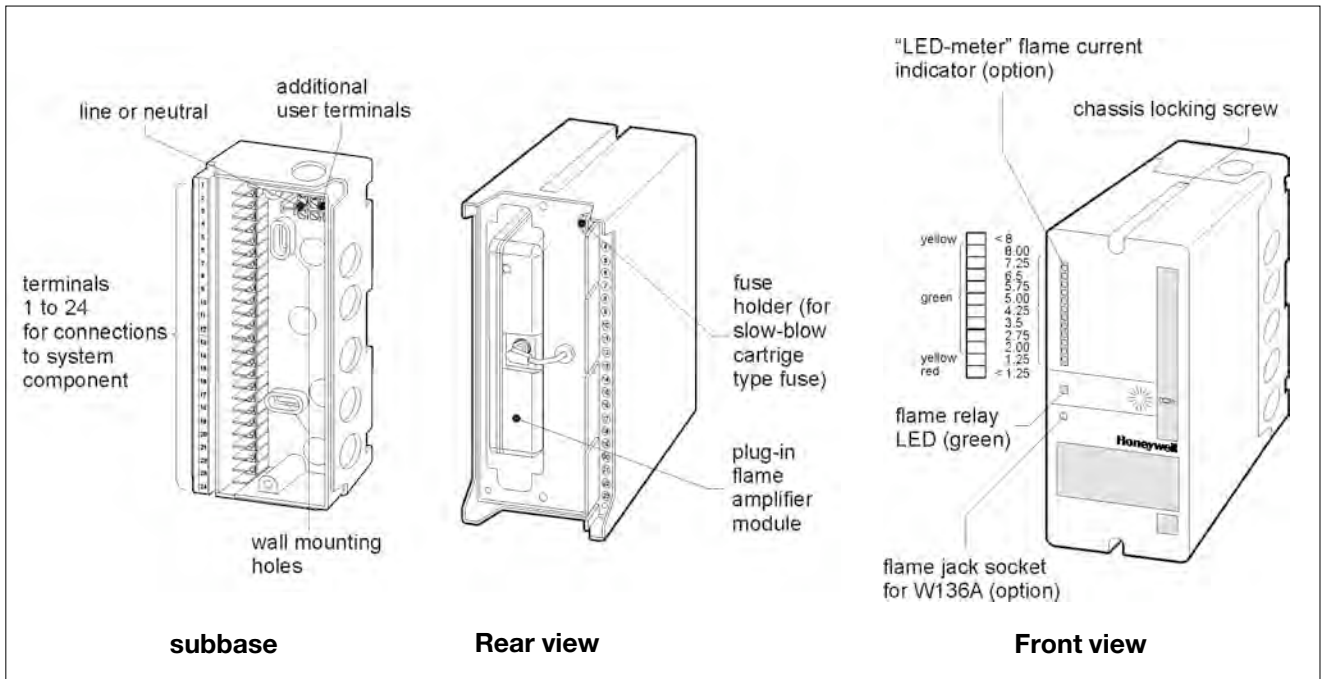


FIG.2 Main features

ACCESSORIES:

Subbase : 46176612-501 : for IP40 (to be ordered separately)

FLAME DETECTION SYSTEM:

PLUG-IN FLAME AMPLIFIERS					APPLICABLE FLAME DETECTORS			
DETECTION-MODE	COLOR	SELF CHECKING	MODEL	FLAME FAILURE RESPONSE TIME (MAX.)	FUEL	TYPE	MODELS	MINIMUM FLAME CURRENT (µA)
RECTIFICATION	GREEN	NO	R7321A	1 sec.	Gas	Rectifying flame rods	Rod holders ³⁾ : C7004/C7007/ C7011 Complete assemblies C7005/C7008/ C7009/Q179	2
			R7321B	2-3 sec.	Gas, Oil, Coal	Ultraviolet	C7012 A OR G	
	YES	R7247B ²⁾	1 sec., 2 sec. or 3 sec. max.	Gas	Rectifying flame rods	Rod holders ³⁾ : C7004/C7007/ C7011 Complete assemblies : C7005/C7008/ C7009/Q179	1,25	
		R7247C ¹⁾	2 sec. or 2-3 sec.	Gas, Oil, Coal	Ultraviolet	C7012 E or F	2 ⁵⁾	
ULTRA VIOLET	VIOLET	NO	R7323A R7323B	1 sec. 2-3 sec.	Gas, Oil,	Ultraviolet	C7027/C7035/ C7044	3.5
	BLUE	YES	R7476B ¹⁾	2 sec. or 2-3 sec.	Gas, Oil, Coal	Ultraviolet (adjustable sensitivity)	C7076	2.5 ⁵⁾
	VIOLET	YES	R7061A	1 sec. or 2 sec. or 2-3 sec.	Gas, Oil, Coal	Ultraviolet	C7061A	2.5

1) Dynamic Self Check circuitry tests all electronic components in the flame detection system (amplifier and detector) 60 to 120 times/min. during burner operation and shuts down the burner if the detection system fails.

2) Circuitry tests only the flame signal amplifier during burner operations and shuts down the burner if the amplifier fails.

3) Order flame rod separately, see instruction sheet for the holder

5) C7012E, F and C7076A shutter operation causes fluctuations in the current reading. Read the average stable current - disregard peaks.

INSTALLATION

IMPORTANT

- 1 The installer must be a trained, experienced flame safeguard technician.
- 2 When installing the subbase and R4348 industrial flame switch refer to the instructions provided by the burner manufacturer. When these are not available follow the instructions packed with the product.
- 3 Disconnect power supply before beginning the installation.

MOUNT THE SUBBASE

The R4348 industrial flame switch can be wall, DIN rail or panel mounted.

WIRE THE SUBBASE


- 1 All wiring must comply with local codes ordinances and regulations.
- 2 Ensure that loads do not exceed the terminal ratings.

SELECTING THE OPERATING VOLTAGE

To match the R4348 to the supply line voltage, select the proper terminals and the internal connector position per the following table.

SUPPLY VOLTAGE	connect supply to terminals...	set internal strap to ...
110V	2 and 3	110V
120V	2 and 3	120V
127V	2 and 3	127V
230V	2 and 1	

To have access to the internal connector, remove the 4 cover retaining screws and slide out the PC board.

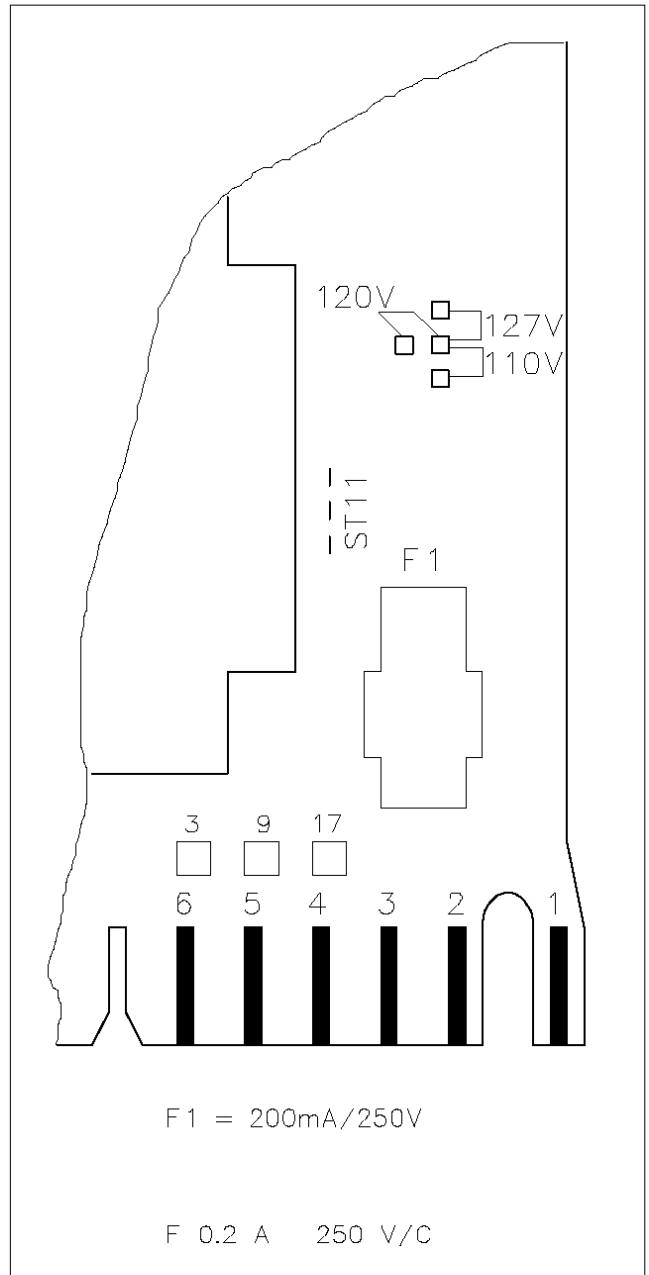

INSTALL THE FLAME DETECTOR

The performance of the flame safeguard system depends upon correct flame detector installation. Refer to the instructions packed with the flame detector and also the burner manufacturer's instructions for details. (See also figure 4).

Keep the flame signal leadwires from the flame detector to the wiring subbase as short as possible. Capacitance increases with leadwire length, reducing the signal strength. The maximum permissible leadwire length depends on the type of flame detector, leadwire, and conduit. The ultimate limiting factor in the flame signal leadwire length is the flame current.

MEASURING FLAME CURRENT STRENGTH

Flame current is measured/recorded in different ways according to the model selected

- 1 It can be measured conventionally using a micro-ammeter which is plugged into a jack socket on the back of the R4348B1008.
- 2 It can be displayed/recorded locally or remotely when the 4-20mA output model is taken.
- 3 Visually presented on the face of the unit by means of color coded LED's.

The customer can choose a model which includes two methods of flame current measurement. e.g. Flame current jack socket for local testing by a service technician plus 4-20mA output for remote indication.

PLUGGING THE R4348 INTO THE SUBBASE

- 1 Plug the selected amplifier into the back of the R4348 (see fig. 3).
Make sure the correct combination of amplifier and flame detector is used.
- 2 Check that wiring connections are correct and that all terminal screws are tight.
- 3 Plug the chassis into the subbase and tighten the two captive screws.
- 4 In case of B1057 model, plug the cable into the back-side of the amplifier.

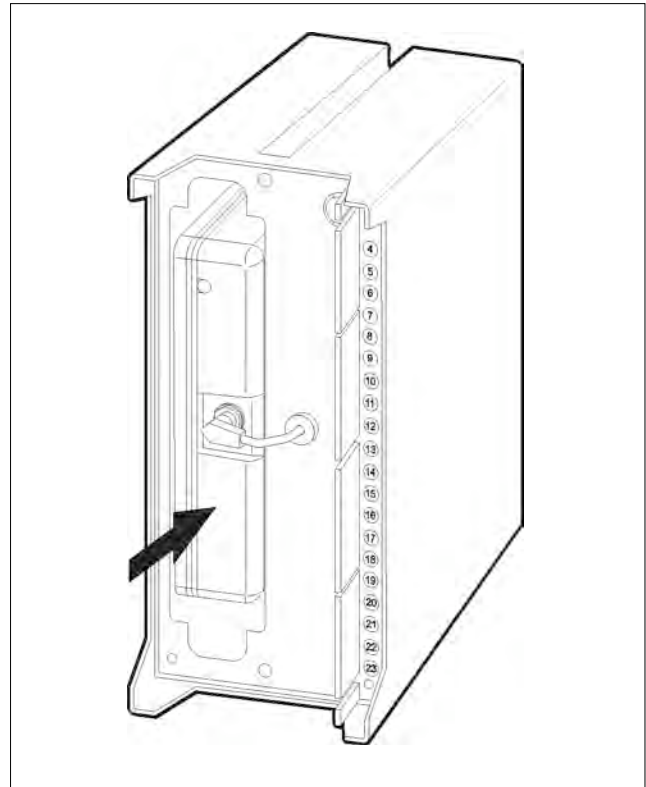


FIG. 3 Installing a plug-in flame current amplifier


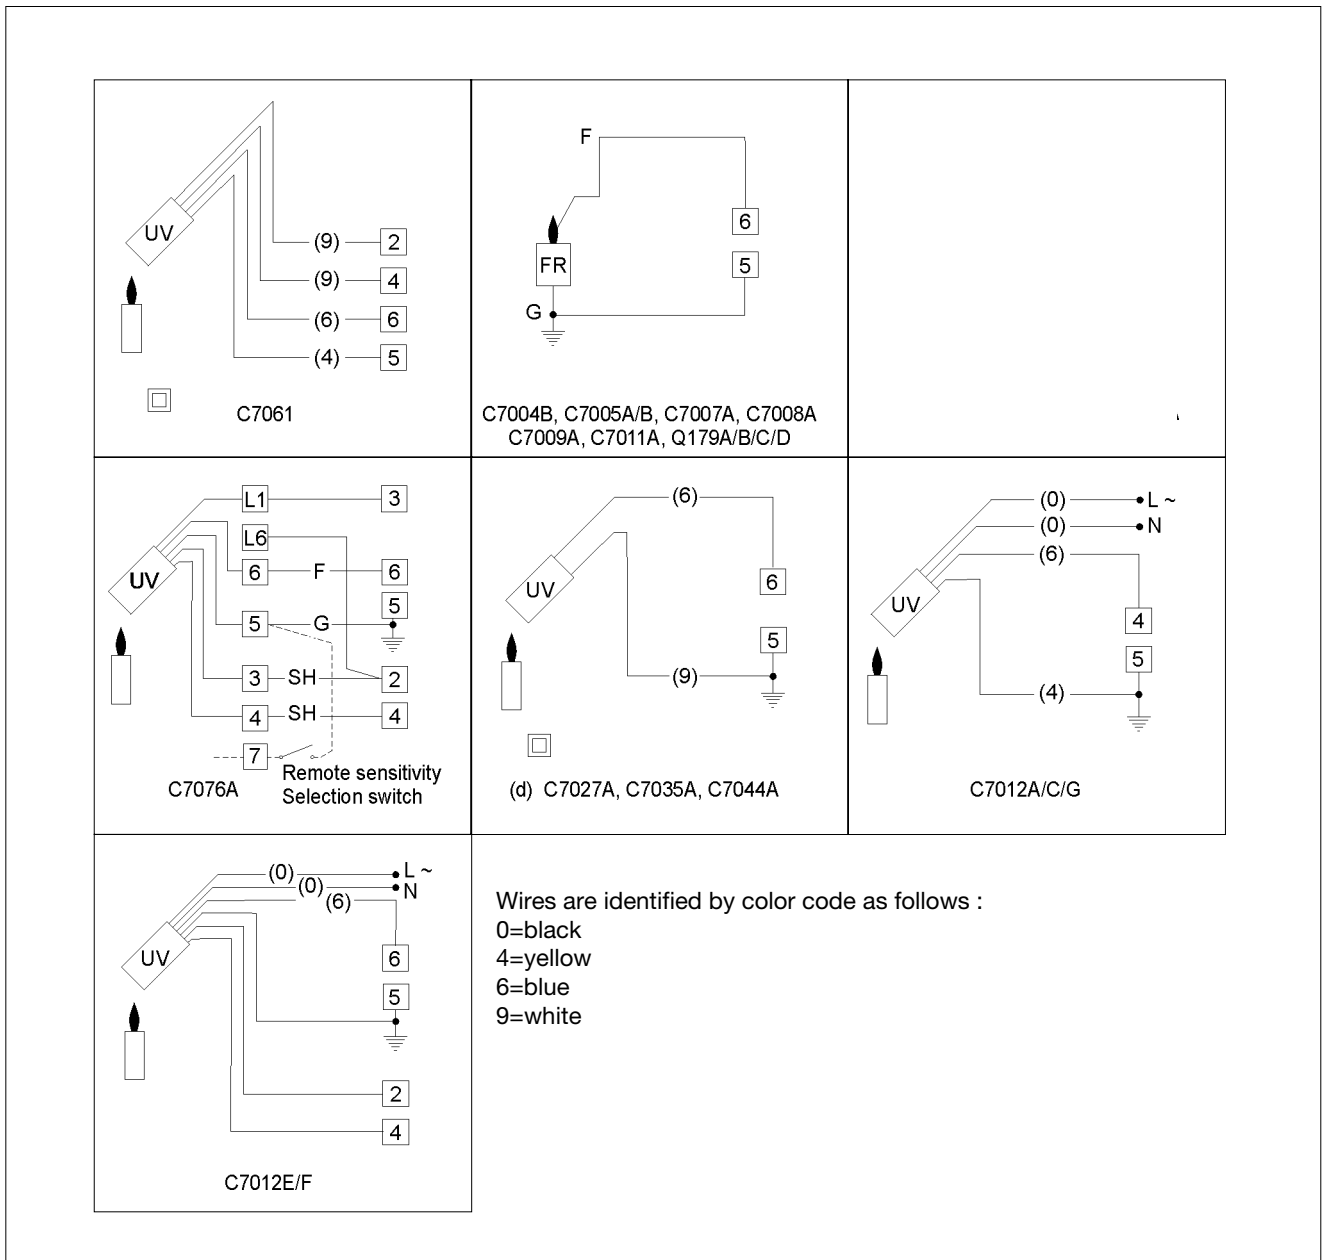


FIG. 4 Flame detector wiring diagrams

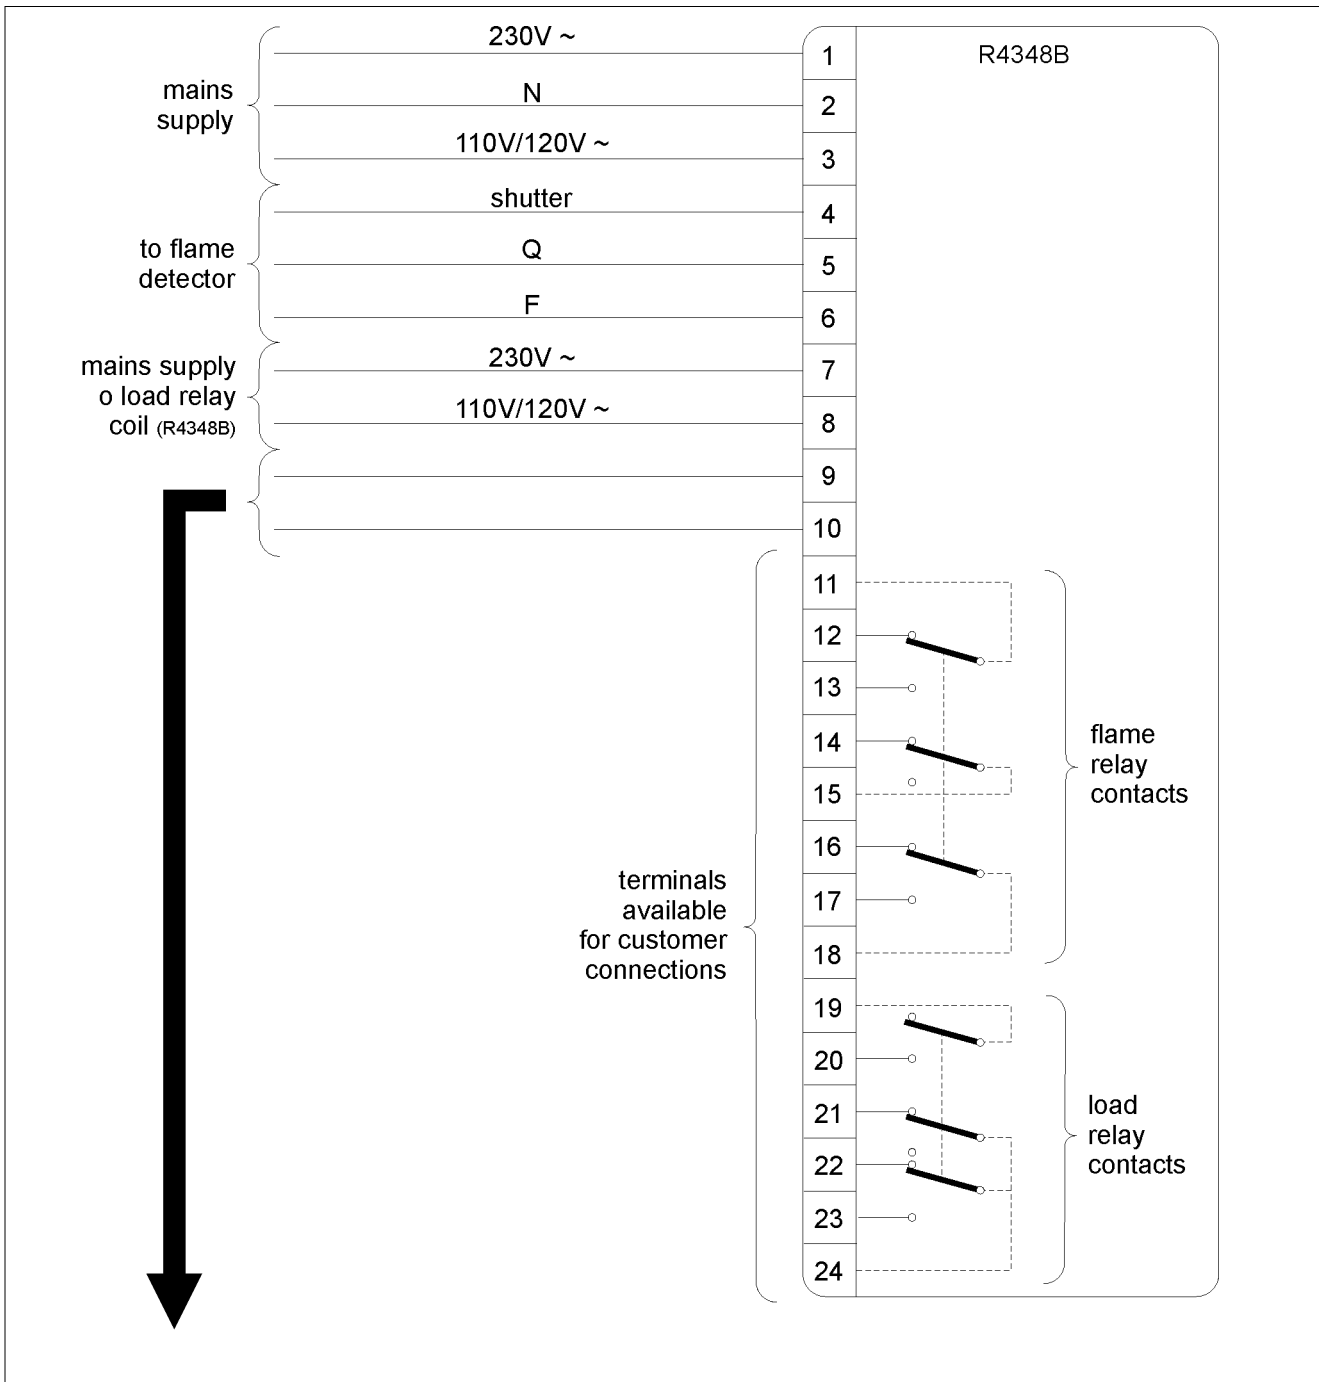

Option:
4-20mA output

load max. 750Ω

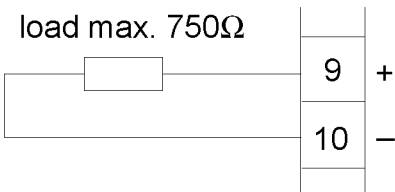


FIG. 5 Industrial flame switch - terminal location

CHECK OUT AFTER INSTALLATION

INSTALLATION CHECKOUT

Preliminary inspection - make certain that :

- 1 System overload protection is correct (5A max.).
- 2 Wiring connections are correct and all terminal screws tight.
- 3 Flame detector installation is complete.
- 4 The correct flame detector is used. Refer to table page 5.
- 5 Burner is completely installed and ready to fire with the fuel lines purged of air.
- 6 Combustion chamber and flues are clear of fuel.
- 7 Power is on at the system main switch.

FLAME DETECTOR CHECKOUT

The best guide to the performance of a flame detector is given by the FLAME CURRENT value.

The expected maximum and minimum values of flame current for the various types of flame detectors are given in the table page 12.

Note that the following have an influence on flame sensing performance :

- 1 Position, size and burning characteristic of the flame.
- 2 Refractory - when refractory temperature exceeds 1370C/2500F some ultraviolet radiation may occur. Lower refractory temperature may affect photocells. See relevant data sheets.
- 3 Temperature at flame detector
 - Flame rods : ensure suitable rod is being used
 - Other detectors : see relevant data sheet.

The R4348B has the possibility of measuring / recording the flame current value in various ways, as follows : (see also MODELS).

- 1 Using a Honeywell W136A micro-ammeter which is plugged into a socket on the face of the R4348.
- 2 By reference to an LED-meter on the face of the R4348 which gives the value "at-a-glance".
- 3 By relaying the current to existing customer recording/ indicating equipment.

HOT REFRACTORY TEST

In applications using caesium oxide detectors (rectifying photocells) it is important to determine that hot refractory does not simulate a flame after the end of normal run. If this happens a flame condition is simulated after the real flame is extinguished and a system restart is made impossible.

Test for this condition by operating the burner until the refractory reaches maximum temperature and then stop the burner fuel supply. At this point the flame current should drop below 1mA, followed by a lockout within 0,8 to 1 second. If this does not happen the photocell may be influenced by the hot refractory.

THIS CONDITION MUST BE CORRECTED.

Try sighting the photocell at a cooler and/or more distant refractory background. If that does not eliminate the trouble try adding an orifice of filter to the detector. Continue to adjust and test until the hold-in problem is eliminated.

NOTE : Repeat all flame detector tests after ALL adjustments have been completed. All tests must be satisfied at the FINAL flame detector position.

PILOT TURN-DOWN TEST

Ensure that any pilot which can be detected by the flame sensing system is powerful enough to light the main burner reliably.

FLAME DETECTOR	MIN. ACCEPTABLE STEADY CURRENT	MAXIMUM CURRENT EXPECTED *	WHAT TO CHECK IF FLAME CURRENT IS UNSTEADY OR WEAK
Flame rod C7004B C7005A/B C7007A C7008A C7009A C7011A Q179A/B/C/D	2.50 μ A	7.00 μ A	Sufficient earthing area Good earth connection Proper positioning of flame rod in flame
Ultraviolet C7012A/E/F/G C7027A C7035A C7044A C7061A C7076A	2.00 μ A 3.50 μ A 3.50 μ A 3.50 μ A 3.00 μ A 3.00 μ A 2.50 μ A	7.00 μ A 7.50 μ A 7.50 μ A 7.50 μ A 7.00 μ A 7.00 μ A 5.50 μ A	Proper sighting Clean lens An unsteady signal indicates the detector is viewing an unstable part of the flame

Sales Affiliates ECC OEM EMEA

Germany, Austria, Switzerland, Liechtenstein

Honeywell GmbH - Hardhofweg - 74821 Mosbach - GERMANY

Ph.: (+49) 6261 81 0 - Fax: (+49) 6261 81 461 - OEM-SalesCentralEurope@Honeywell.com - www.honeywell.com/sites/de

France

Honeywell SA - Parc Technologique de St. Aubin - Bâtiment Mercury BP87 - 91193 Gif-Sur-Yvette Cedex - FRANCE

Ph.: (+33) 1 60 19 80 00 - Fax: (+33) 1 60 19 81 81 - OEM-SalesWestEurope@Honeywell.com - www.honeywell.com/sites/fr

Italy

Honeywell srl - Via Philips n.12 - 20052 Monza - ITALY

Ph.: (+39) 0 39 21 65 1 - Fax: (+39) 0 39 21 65 402 - OEM-SalesSouthEurope@Honeywell.com - www.honeywell.it

Spain, Portugal

Honeywell S.A. - Josefa Valcárcel 24 - 28027 Madrid - SPAIN

Ph.: (+34) 9 13 13 61 00 - Fax: (+34) 9 13 13 61 27 - OEM-SalesSouthEurope@Honeywell.com - www.honeywell.com/sites/es

United Kingdom

Honeywell Control System Ltd. - Unit 2 President Buildings, Savile Street East - S Yorks S4 7UQ - SHEFFIELD - UNITED KINGDOM

Ph.: (+44) 114 286 0920 - OEM-SalesUK@Honeywell.com - www.honeywell.com/sites/uk

Netherlands, Scandinavia

Honeywell B.V. - Laarderhoogtweg 18-20 - 1101 EA Amsterdam Z.O. - THE NETHERLANDS

Ph.: (+31) 2 05 65 69 11 - Fax: (+31) 2 05 65 66 00 - OEM-SalesWestEurope@Honeywell.com - www.honeywell.com/sites/nl

Belgium, Luxembourg

Honeywell NV - Hermes Plaza Hermeslaan, 1H - 1831 Diegem - BELGIUM

Ph.: (+32) 2 728 27 11 - Fax: (+32) 2 728 24 68 - OEM-SalesWestEurope@honeywell.com - www.honeywell.be

Turkey

Honeywell A.S. - Cayiriyolu Sok. No:7 - Ucggen Plaza, Kat:7 - Icerenkoy 34752 Istanbul - TURKEY

Ph.: (+90) 216 578 7120 - Fax: (+90) 216 575 6637 - OEM-SalesSouthEurope@Honeywell.com - www.honeywell.com/sites/tr

Slovakia

Honeywell s.r.o. - Mlynske Nivy 71 - PO Box 75 - 82007 Bratislava 27 - SLOVAKIA

Ph.: (+421) 2 322 622 11 - Fax: (+421) 2 322 622 55 (54) - OEM-SalesEasternEurope@Honeywell.com - www.honeywell.sk

Czech Republic

Honeywell spol. s.r.o. - V parku 2326/18 - 14800 Prague - CZECH REPUBLIC

Ph.: (+420) 242 442 111 (255) - Fax: (+420) 242 442 181 - OEM-SalesEasternEurope@Honeywell.com - www.honeywell.com/sites/cz

Kazakhstan

Honeywell Automation Controls - 42, Timiryazev Str. - 050057 Almaty - KAZAKHSTAN

Ph.: (+7) 727 2747 747 - Fax: (+7) 727 2752 252 - OEM-SalesEasternEurope@Honeywell.com - www51.honeywell.com/ru

Ukraine

IP Honeywell Ukraine - Silver Centre - 4, Ivana Lipse ave. - 03680 Kiev - UKRAINE

Ph.: (+380) 44 351-15-50 (52) - Fax: (+380) 44 351-15-51 (53) - OEM-SalesEasternEurope@Honeywell.com - www51.honeywell.com/ru

Russia

ZAO Honeywell - Luzhniki 24 - 119048 Moscow - RUSSIA

Ph.: (+7) 495 796 9800 (35) - Fax: (+7) 495 796 9894 (797 9370) - OEM-SalesEasternEurope@Honeywell.com - www51.honeywell.com/ru

Hungary

Honeywell Kft. - Petnehazy U. 2-4 - 1139 Budapest - HUNGARY

Ph.: (+36) 1 451 4300 (46) - Fax: (+36) 1 451 4343 - OEM-SalesEasternEurope@Honeywell.com - www51.honeywell.com/hungary

Poland

Honeywell Sp.z.o.o. - Domaniewska 39b - 02672 Warsaw - POLAND

Ph.: (+48) 22 60 60900 (50) - Fax: (+48) 22 60 60983 - OEM-SalesEasternEurope@Honeywell.com - www.honeywell.com/sites/pl

Romania

Honeywell Romania SRL - Calea Floreasca 169A - 014462 Bucharest - ROMANIA

Ph.: (+40) 312 24 3000 (3) - Fax: (+40) 212 31 6439 - OEM-SalesEasternEurope@Honeywell.com - www.honeywell.com/sites/romania

● **Honeywell Technologies Srl**
ACS – ECC EMEA
Z.A. La Piece 16
CH-1180 Rolle
Switzerland
Ph.: (+41) 21 695 3000
Fax: (+41) 21 695 3030
<http://ecc.emea.honeywell.com>
www.honeywell.com

Combustion Controls EMEA

Honeywell